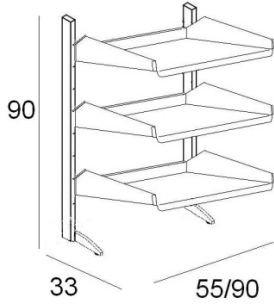
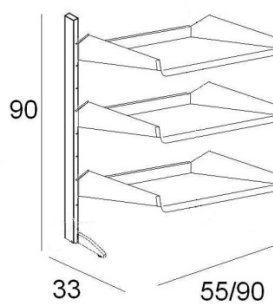
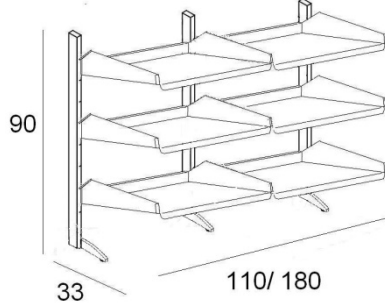
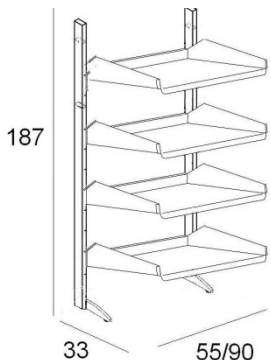
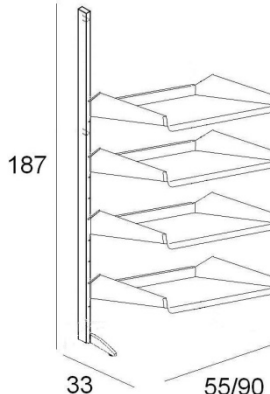
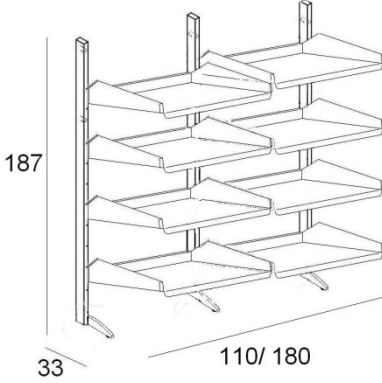
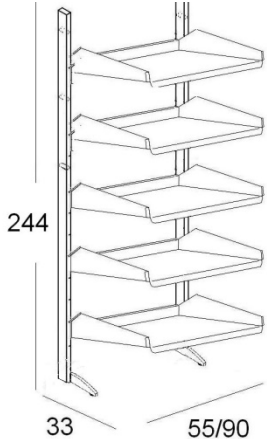
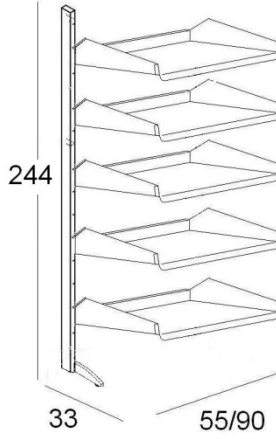
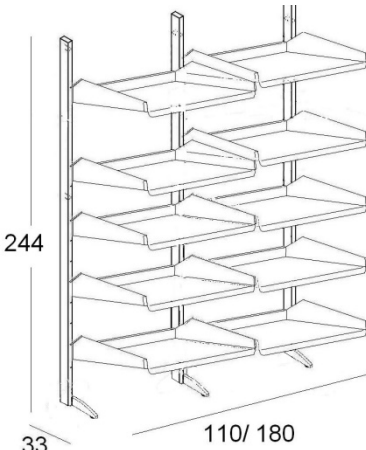



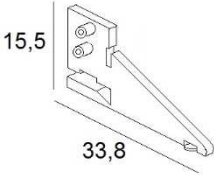
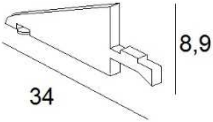
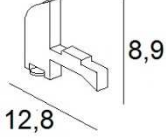

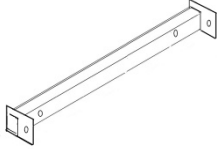









# TOTEM FURNITURE - ARMOIRE

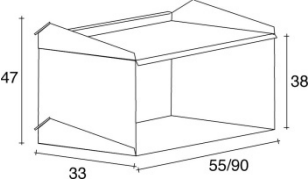
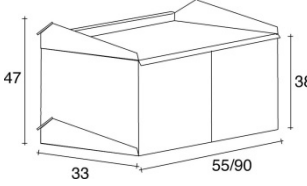
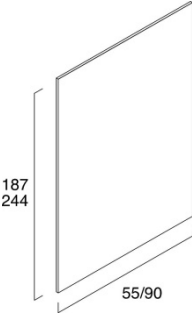


 <p>90 33 55/90</p> <p>T02553M – T02903M</p>	 <p>90 33 55/90</p> <p>T01553M – T01903M</p>	 <p>90 33 110/180</p> <p>T03556M – T03906M</p>
 <p>187 33 55/90</p> <p>T12554M – T12904M</p>	 <p>187 33 55/90</p> <p>T11554M – T11904M</p>	 <p>187 33 110/180</p> <p>T13556M – T13906M</p>
 <p>244 33 55/90</p> <p>T22555M – T22905M</p>	 <p>244 33 55/90</p> <p>T21555M – T21905M</p>	 <p>244 33 110/180</p> <p>T235510M – T239010M</p>

 <p>520/DX – 520/SX – 520/C</p>	 <p>521/DX – 521/SX – 521/C</p>	 <p>522/DX – 522/SX – 522/C</p>
 <p>523 FF</p>	 <p>523 BM</p>	 <p>523 BS</p>
 <p>524/55</p>	 <p>524/90</p>	
 <p>525/55 – 525/90</p>	 <p>526/55 – 526/90</p>	
 <p>527/55 – 527/90</p>	 <p>531/55 – 531/90</p>	 <p>532/55 – 532/90</p>
 <p>528</p>	 <p>533</p>	<p>535</p>

# TOTEM FURNITURE - ARMOIRE



 <p>536/55 – 536/90</p>	 <p>537/55 – 537/90</p>
 <p>529/55 h187 – 529/90 h187 530/55 h240 – 530/90 h240</p>	