

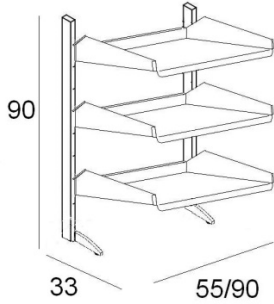
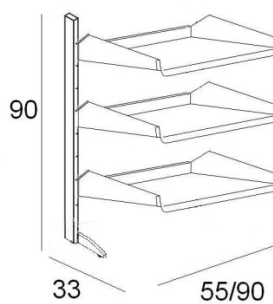
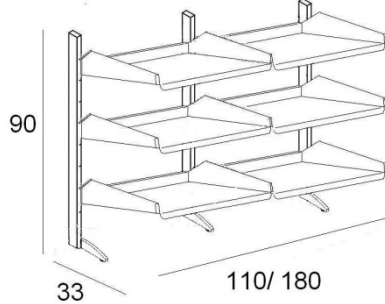
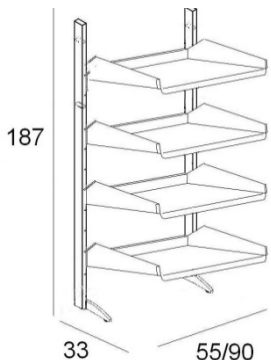
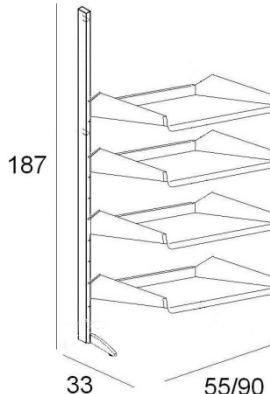
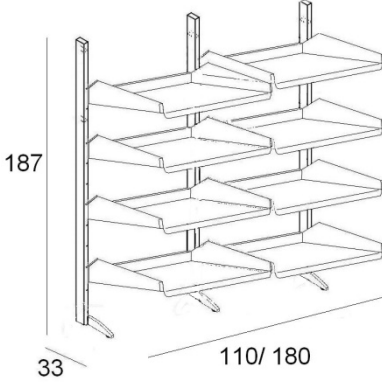
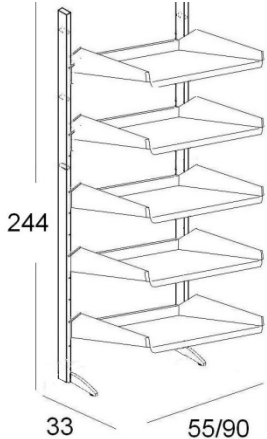










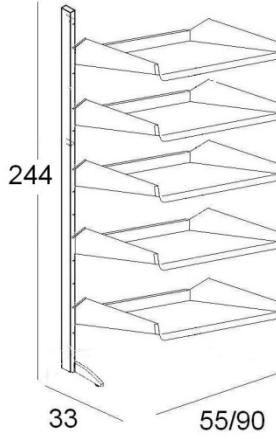






# TOTEM FURNITURE - ARMOIRE

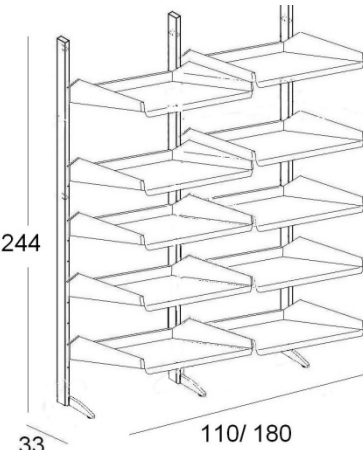

|  |  |  |
|--|--|--|
|  <p>90<br/>33 55/90</p> <p>T02553M – T02903M</p>    |  <p>90<br/>33 55/90</p> <p>T01553M – T01903M</p>    |  <p>90<br/>33 110/180</p> <p>T03556M – T03906M</p>      |
|  <p>187<br/>33 55/90</p> <p>T12554M – T12904M</p>  |  <p>187<br/>33 55/90</p> <p>T11554M – T11904M</p>  |  <p>187<br/>33 110/180</p> <p>T13556M – T13906M</p>    |
|  <p>244<br/>33 55/90</p> <p>T22555M – T22905M</p> |  <p>244<br/>33 55/90</p> <p>T21555M – T21905M</p> |  <p>244<br/>33 110/180</p> <p>T235510M – T239010M</p> |


# TOTEM FURNITURE - ARMOIRE

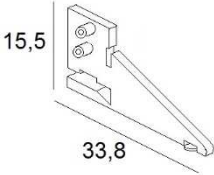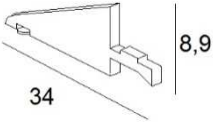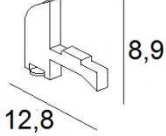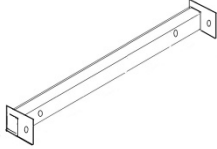


|  |  |  |
|--|--|--|
|  <p>520/DX – 520/SX – 520/C</p> |  <p>521/DX – 521/SX – 521/C</p> |  <p>522/DX – 522/SX – 522/C</p> |
|  <p>523 FF</p>                  |  <p>523 BM</p>                  |  <p>523 BS</p>                  |
|  <p>524/55</p>                |  <p>524/90</p>                |  |
|  <p>525/55 – 525/90</p>       |  <p>526/55 – 526/90</p>       |  |
|  <p>527/55 – 527/90</p>       |  <p>531/55 – 531/90</p>       |  <p>532/55 – 532/90</p>       |
|  <p>528</p>                   |  <p>533</p>                   | <p>535</p>   |

# TOTEM FURNITURE - ARMOIRE


**talin**<sup>®</sup>

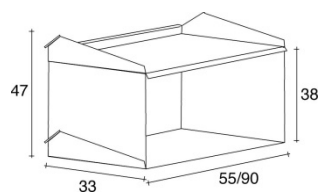

536/55 – 536/90

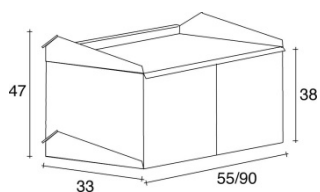

537/55 – 537/90

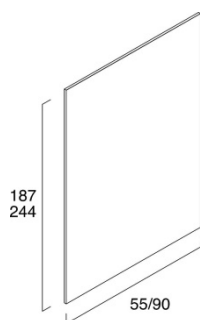

529/55 h187 – 529/90 h187  
530/55 h240 – 530/90 h240